

Installation of equipment


Impact area =

- - -






Zone d'Inpact Sol souple Inpact Area Wetpour Area de Inpacto Fallraun bei synthetischen Fallschutz

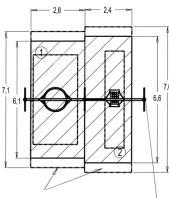





Zone d'Inpact Sol fluent Inpact Area Loose particle naterial Arenero Fallraum bei losen Bodennaterial

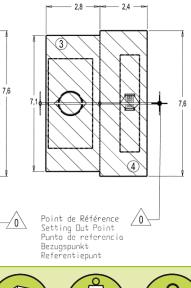

1	1,55m	17,5m²
2	1,65m	16m²
3	1,55m	20m ²
4	1,65m	18,5m²



